

## Thank you for purchasing a Mermade. We hope you love it!

We make tools and products that change the **hair game**. We are a team of hair enthusiasts inspiring a new generation of **hairdressers**,

stylists and the everyday humans. Now, we are creating the next game-changing hair tools and products.

Merci d'avoir acheté un Mermade. Nous espérons que vous l'adorerez I. Nour arisons des outils «1 des produits par involutionnent le monde de la colffure. Nous sommes une égupe de passionnés de chieveux inspirant une nouvelle génération de colffeurs, stylistes et de personnes du quotidien. Aujourd'hui, nous concevons les nonhiers outils es troduits coellières réholitismes les felositismes.

Mermade:

MERMADE HAIR PTY LTD 1/649 BEAUFORT ST, MT LAWLEY, WA AUSTRALIA 60

QUESTIONS OR COMMENTS: E: HELLO@MERMADEHAIR.COM W: WWW.MERMADEHAIR.COM

W: WWW.MERMAI PH: (08) 6118 8406

MERMADE EURP BV , KROONWIEL 2, 6003BT WEERT, NE



#### **BOUNCY WAVES**

& TIGHT CURLS ONDULATIONS REBONDIES & BOUCLES SERRÉES

CERAMIC BARREL
CYLINDRE EN CÉRAMIQU

COMPACT & LIGHTWEIGHT

30-SECOND HEAT-UP TIME TEMPS DE CHAUFFE DE 30 SECONDES

> LONG 2M CORD CORDON LONG DE 2M

25MM/1" BARREL BARILLET DE 25 MM / 1"

IONIC TECHNOLOGY

2-YEAR WARRANTY

WORLDWIDE VERSAL VOLTAGE





# THIS MANUAL PROVIDES SAFETY INSTRUCTIONS, DIRECTIONS AND CARE INSTRUCTIONS. PLEASE STORE SAFFLY

PRODUCT: Mini Curl Tong
MODEL NUMBER/S: MH9040 MH9041 MH9042 MH9043
TEMPERATURE/S: 190°C / 374°F
WATTAGE/VOLTAGE: AC. 100V - 240V. 50Hz. 25W

### OPERATING INSTRUCTIONS

burning your surface.

- Hair should be clean, dry and free of tangles before using. Rest tool on a heat-resistant mat to avoid heating or
- Switch the power button to "on" to turn the tool on.
- The default temperature is 190°C / 374°F.
- Start by dividing hair into sections. Smaller sections will create more defined waves and ourls. Spray each section liberally with a heat protectant. Be careful not to touch the scalp with the tool. Wrap the hair around the barrel. Hold for 2-5 seconds. Hold for less time if hair is easy to curi, or if you want less defined waves or curis.
- Once you have finished curling, make sure the hair has completely cooled down before touching to allow it time to set.
- Switch the power button to "off" to turn the tool off. Once completely cool, store it in a safe place.

**WARNING:** Always do a test 1cm section at the back of your hair to ensure the proper setting for your hair type, to ensure the tool is working correctly and you understand how it functions. Place on a thermal/heat resistant surface.

#### **ATTENTION**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Keep the appliance out of reach from young children, particularly during use and cool down.
   News love the appliance unattended when it is
- Never leave the appliance unattended when it is connected to a power supply. Always place the
- connected to a power supply. Always place the appliance on a heat-resistant, stable flat surface.
  Do not use it on wet, damp or synthetic hair.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA
- is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

  Always do a strand test before using on your hair as heat can affect some hair colour, in particular on freshly coloured or toned hair.

## **MAINTENANCE**

- To clean the unit, be sure the unit is cool and unplugged. Wipe the handle and plates with a damp cloth. No other maintenance is necessary.
- Do not attempt to repair the appliance yourself. This appliance has no user serviceable parts.
- Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

  Never wrap the cord around the said of the said
- Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

#### SAFETY & RECYCLING

- Take extra care to ensure the hot plates do not contact skin or eyes.
- Use a mirror when using the appliance to assist with safe usage.
- Do not place the tool on surfaces that are not heat resistant.
- Polythene bags over the product and packaging may be dangerous. To avoid the danger of suffocation, keep away from babies and children. These bags are not toys.
   This appliance may not be treated as household waste, it
- should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the

prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service. For EU/JK disposal WEEE (Waste from Electrical and Electronic Equipment) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances

household waste disposal service. For EU/UK disposal WEEE (Waste from Electrical and Electronic Equipment) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery and recycling of the materials from which they are made and to reduce the impact on human health and the environment.

# I IMITED 2-YEAR GLOBAL WARRANTY

Mermade Hair warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not

include damage to the product resulting from accident or misuse. If the product should become

defective within the warranty period, Mermade Hair will replace the item. Email hello@mermadehair.com for Warranty issues and provide the batch code found on the power cord. This warranty does not

cover products damaged by the following: Accident, misuse, abuse or alteration of the product Servicing by unauthorized persons Use with unauthorized accessories

· Connecting it to incorrect current and voltage Wrapping cord around appliance causing premature wear & breakage

· Any other conditions beyond our control

MERMADE HAIR SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES OR REGISTER YOUR WARRANTY ONLINE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow that exclusion or limitation of incidental, special, or consequential damages.

#### SAVE THESE INSTRUCTIONS





